



braille and tactile taxi signs

STEP 1

Ensure the area of the vehicle “forward of the door handle” is clean.

Use “isopropyl” rubbing alcohol to prepare the door surface for the 3M tape.


Allow two minutes for area to dry prior to attaching the sign.

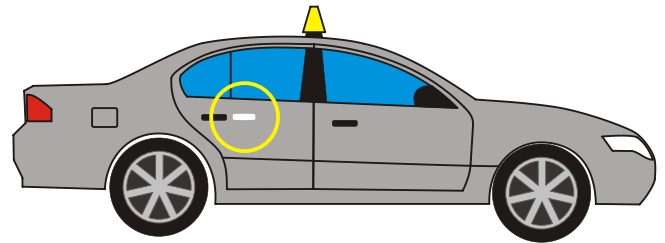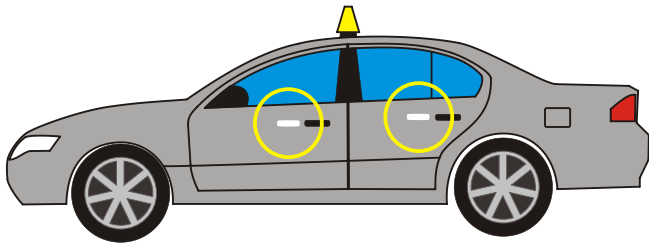

Standard Sedan and Van Door Handles:
place 25mm or 1 inch forward of the handles



Van sliding Door Handles:
underneath and forward of centre

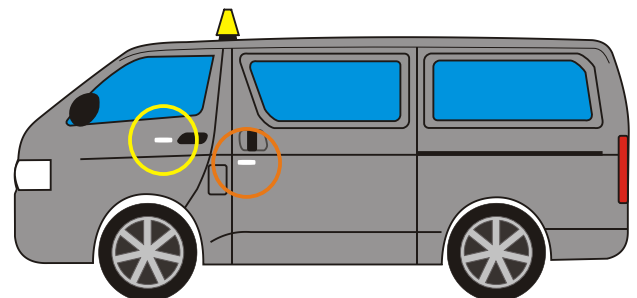

As recommended by Vision Australia

STEP 2

Peel the red 3M liner just before application.

Use a ruler or level as a guide and place sign gently onto surface first.

Once in place, press firmly (approx. 15psi of pressure) for permanent adhesion.